


Next3 software update

The following document describes the procedure for the next3 software update in nextOS using the next interface.

Update

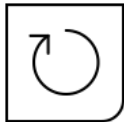

The update section is where the update of the next operating system (inverters, nx interface and accessories) is done.

Select the source where the update is located:

- USB key: Download the latest software version from the download center in our website: <https://www.studer-innotec.com/en/downloads/>. Go to the Software and Updates section and download the **"next3 system update"**. Unzip the file and copy the "next_vX.Y.Z.A.stub" file on an usb key at the root of the key.




Make sure that the copy process is finalized before removing the USB from the computer. We advise to eject the unit to avoid any file corruption issue.


Read the pdf document included in the zip file containing the next3 software update procedure. Insert the USB key in the next interface.

- Internet: The update via internet is not yet available.

Updates



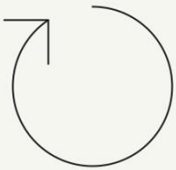




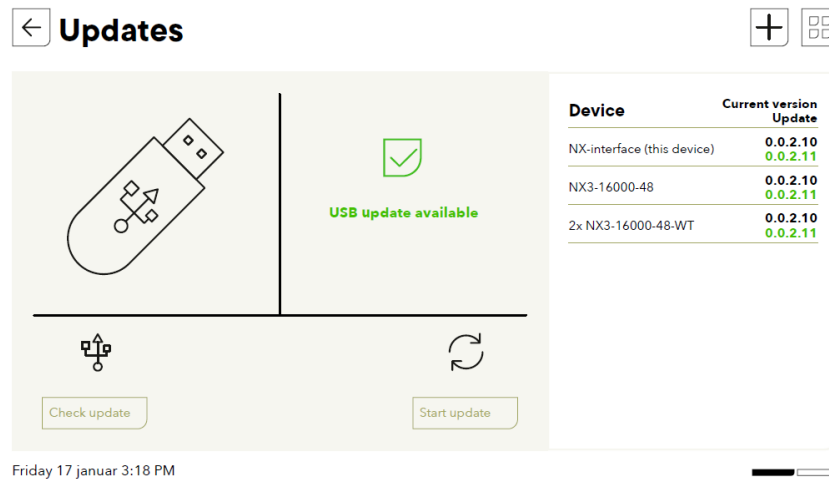
No update available

Device	Current version	Update version
nx-interface (this device)	0.0.0.37	
2x NX3-16000-48	0.0.0.37	



After the check, the interface will identify if an update is available. The current and the available update can be seen on the right side. An information will be displayed in case of software incompatibility.

If there is no update available you can click **"Search USB"** to confirm if the update file is on the USB unit.



Once the update is identified, both the current and available versions information are shown. The update of the system is ready, press the **"Start update"** button.

You will see a message to inform that the system will restart during the update procedure. Please be aware that the next3 will turn off and on during the update process. Disconnecting the loads before the update process is therefore advised.

The update is performed in several steps. First, the next interface is updated and restarted. Once the next interface update is finished the update of the other devices in the system is also performed subsequently and automatically. The system will restart again after all the devices are updated.

Please bear in mind that after restarting, the devices will be in off mode, therefore powered but not running. You will need to turn on the devices using the system "ON/OFF" button in the next interface.

Note: The usb key must **not** be removed until the end of the updating process. If for some reason the updating process is interrupted, please restart it and make sure to let the process finish.

Technical Support Service
Studer Innotec SA